

## **SPECIFICATIONS**

Product name:	Electric Air Duster
Product model:	OG100
Motor:	High-speed brushless
Max Speed:	130000+ RPM
Max Air Force:	140G
Max Wind Speed:	45 m/s
Speed Control:	Stepless(level 1-8)
Runtime:	8-120 min (speed-dependent)
Charging Port:	USB Type-C
Charge Time:	~2.5 H (5V/2A adapter)
Input:	5V - 2A (must use compliant adapter)
Battery:	2000 mAh*2
Display:	Battery level & Wind speed
Weight:	295G
Dimensions:	145*92*40mm
Storage temperature:	-20 °C ~80 °C

## **APPLICATION SCENARIOS**

Electronics	Keyboards     PC internals (caution)     Laptop vents Camera lenses/sensors (keep distance     Phone ports     Phone/computer repair     Console crevices
Precision Items	Models     LEGO     Collectibles     Stamps     Crafts     Instrument keys
Home/Office	Bookshelf/window tracks     Switch panels     Fan blades     Appliance vents Printer interiors (caution)     Desk crevice
Automotive	Dashboard/vents     Storage compartments     Seat crevices     Mirrors     Mild water spots
Outdoor	Tents Picnic mats BBQ grills (dust/leaves/light snow) Outdoor seating
Other	Pet hair (surfaces only) Brush cleaning Workshop debris

## **MAINTENANCE**

- 1.Casing: Clean with soft, dry cloth. Do not use corrosive
- cleaners or immerse. 2. Air Inlet Grille: Check regularly for dust/hair blockage. 3.If blocked: Use soft brush or compressed air (blow reverse direction carefully).
- 4. Ensure device is OFF.
- 5.Air Outlet: GentLy wipe visible dust with soft cloth/tool.
  6.Battery Care:Long-term storage (>3 months): Maintain 40-60% charge.
- 7.Temperature: Avoid storage/use below 0°C or above
- 8.Discontinue use immediately if:
- ⚠ Overheating ⚠ Odor ⚠ Display abnormality ☐ Contact after-sales service.

# TROUBLESHOOTING GUIDE

Symptom	Possible Cause	Resolution
No Power (Fails to start)	Depleted battery     Incorrect power-on procedure     Battery/Internal failure	Connect to charger. Press and hold power button for ~ 2 seconds. Contact aeneovix.com.
Short Runtime	Low battery charge     Excessive wind speed setting     Battery degradation     Severe air inlet obstruction	Fully recharge battery.     Reduce speed setting.     Contact after-sales support for battery replacement.     Power OFF → Clean inlet grille.
Charging Failure / Slow Charge	Non-compliant charger (≠5V/2A)  Faulty cable/adapter  Debris in charging port / Poor contact  Battery/Charging circuit fault	Use manufacturer-specified 5V/2A adapter ONLY.     Replace with certified accessories.     Inspect port → Clean if contaminated → Reconnect securely.     Contact aeneovix.com.

Symptom	Possible Cause	Resolution
Unstable/ No Airflow	Unstable/No Airflow Inlet grille obstruction     Fan blade jam/foreign object     Motor/Control board failure	Power OFF → Clear blockage.     Do not disassemble → Contact aeneovix.com.
Overheating / Abnormal Odor	Overloading Inadequate ventilation / Blocked inlet Internal component failure	Power OFF immediately → Allow cooling → Resume at lower speed.     Clear inlet → Operate in ventilated area.     POWER OFF IMMEDIATELY → Isolate from flammables → Contact aeneovix.com.
Display Malfunction	Battery depleted     Display module defect	Recharge device.     Contact aeneovix.com.

## **WARRANTY INFORMATION**

This product carries a limited 24-month warranty from purchase date.

⚠Warranty Exclusions: Damage from misuse, abuse, non-compliance with instructions, unauthorized disassembly, natural disasters, accidents, or non-OEM

See included warranty card for full terms.



aeneovix.com



